

CLIÉ

Software Guide

PEG-SL10 / PEG-SJ30

Click the link to access the manual.

[Introduction](#)

[CLIÉ Demo](#)

[PictureGear Pocket / PhotoStand](#)

[CLIÉ Paint](#)

[gMovie](#)

[Memory Stick Gate](#)


[Memory Stick Autorun](#)

[Memory Stick Backup](#)

[Memory Stick Import / Export](#)

[World Alarm Clock](#)

[Documents To Go®](#)

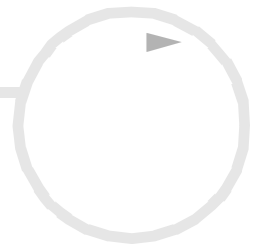

Introduction

CLi^é

Notice

Owner's record

The product number and serial number are located on the back of the product. Record the serial number in the space provided below. Refer to these numbers whenever you call your Sony dealer regarding this product.

Product name: **PEG-SL10 / PEG-SJ30**

Serial number: _____

Caution

You are notified that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Please contact your nearest Sony dealer regarding the problem you are experiencing with your Sony product.

On the supplied software

This product contains software owned by Sony and licensed by third parties. Use of such software is subject to the terms and conditions of license agreements enclosed with this product. Software specifications are subject to change without notice and may not necessarily be identical to current retail versions.

© 2002 Sony Corporation All rights reserved.

Reproduction in whole or in part without permission is prohibited.

Copyright laws prohibit reproducing the software or the software manual in whole or in part, or renting the software without the permission of the copyright holder.

In no event will SONY be liable for any financial damage or loss of profits arising out of the use of the software supplied with this player.

In the event a problem occurs with this software as a result of defective manufacturing, SONY will replace it at SONY's option or issue a refund. However, SONY bears no other responsibility.

The software provided with this player cannot be used with equipment other than that which it is designated for use with.

Please note that, due to continued efforts to improve quality, the software specifications may be changed without notice.

Program © 2002 Sony Corporation, © 2002 Palm Inc. or its subsidiaries. All rights reserved.

Trademarks

Sony, Memory Stick, Jog Dial, the Memory Stick logo and PictureGear are trademarks of Sony Corporation. Graffiti, HotSync and Palm OS are registered trademarks, and the HotSync logo and Palm are trademarks of Palm Inc. or its subsidiaries.

IBM and PC/ AT are registered trademarks of International Business Machines Corporation.

Microsoft Windows, Outlook, Word and Excel are registered trademarks of Microsoft Corporation.

MMX and Pentium are registered trademarks of Intel Corporation.

AvantGo, the AvantGo Client and the AvantGo logo are registered trademarks of AvantGo Inc.

Pumatech, the Pumatech logo, Intellisync and Intellisync Lite are trademarks of Pumatech Inc. that may be registered in some jurisdictions.

Apple, QuickTime and the QuickTime logo are trademarks used under licence. QuickTime is registered in the U. S. and other countries.

Adobe and Adobe Acrobat Reader are trademarks of Adobe Systems Incorporated.

Documents To Go is a registered trademark of DataViz Inc.

This product includes fonts owned by TypeBank Co, Ltd. under licence.

All other trademarks are trademarks of their respective owners.



About this manual

The Software Guide describes each software application and its features, as follows:

- ❑ **Presenting the CLiÉ features** (CLiÉ Demo)
- ❑ **Viewing image files** (PictureGear™ Pocket / PhotoStand / PictureGear Lite)
- ❑ **Editing image files** (CLiÉ Paint)
- ❑ **Playing movies** (gMovie™)
- ❑ **Exchanging data with the Memory Stick™** (Memory Stick Gate)
- ❑ **Setting the Memory Stick™ automatic start function** (Memory Stick Autorun)
- ❑ **Backing up data** (Memory Stick Backup)
- ❑ **Copying data to the Memory Stick™** (Memory Stick Import / Export)
- ❑ **Viewing the time around the world** (World Alarm Clock)
- ❑ **Viewing Word, Excel and other files on your CLiÉ handheld** (Documents To Go®).


Installing applications for use on your CLIÉ handheld

The following applications are preinstalled on your CLIÉ handheld:

- CLIÉ Demo
- CLIÉ Paint
- Memory Stick Autorun
- Memory Stick Backup
- Memory Stick Gate
- Memory Stick Import
- PictureGear Pocket
- World Alarm Clock

The following applications are available on your CLIÉ handheld once you install the Palm™ Desktop for CLIÉ software on your computer and perform a HotSync® operation.

- gMovie
- PhotoStand

 If you perform a hard reset on your CLIÉ handheld, you will need to re- install these applications from the CD-ROM.



Applications for use on your computer

The following applications are available on the installation CD-ROM, for use on your computer:


- Adobe Acrobat Reader
- AvantGo
- Documents to Go
- IntelliSync Lite
- Memory Stick Export
- Palm Desktop
- PictureGear Lite
- QuickTime

Back to main menu ▲



CLIÉ Demo

CLIÉ

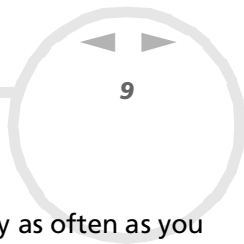

Presenting the CLIÉ features




CLIÉ Demo presents the CLIÉ features in a short presentation that you can watch and enjoy as often as you like.


To launch CLIÉ Demo, proceed as follows:

Tap the **CLIÉ Demo** icon to launch the application.

Enjoy the show!

CLIÉ Demo menu items

- ❑ To see the **Options** screen, just write  in the Graffiti® writing area.
 - ❑ To see the **About** dialog box, just write  in the Graffiti® writing area.
-  You must wait until the show has displayed a few screens before you can access the Graffiti® writing area.

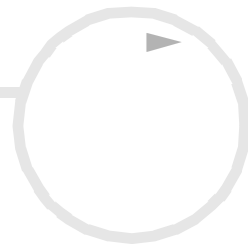

PictureGear Pocket / PhotoStand

CLiÉ

Viewing image files

This part of the manual explains how to view image files on your CLIE handheld, with PictureGear Pocket and PhotoStand.

What you can do with PictureGear Pocket

PictureGear Pocket is a picture album application for your CLIE handheld.

- ❑ Anytime, anywhere...
Using PictureGear Pocket, you can view still image files from various sources, including those taken with a digital camera or downloaded from the Internet. The images can either be stored on your CLIE handheld or Memory Stick™, and you can copy the image files between them as well. All image files can be sorted into categories, which you can personalize. You also can add comments to each image.
- ❑ Using PictureGear Pocket as a photo stand or a clock:
With the PhotoStand function, you can display image files that are drawn on a computer or image files taken with a digital camera. You can also use your CLIE handheld to display the current time on your CLIE handheld screen while using the PhotoStand function.
- ❑ Beaming image files...
Use IrDA (Infrared) communication to exchange image files easily with other CLIE handheld users. You cannot beam image files to other Palm™ OS based devices.
- ❑ Pasting an image file to an address record:
You can paste an image to your address information. For details, refer to the **Operating Instructions** manual.
- ❑ Jumping to the editing application:
PictureGear Pocket lets you jump easily to CLIE Paint to draw on the image files.

Installing PictureGear Pocket


You do not have to install PictureGear Pocket on your CLIÉ handheld, as it is preinstalled. To install PhotoStand, perform a HotSync® operation after installing the Palm™ Desktop software from the CD-ROM.

Installing PictureGear Lite on your computer

You can convert the image files stored on your computer using PictureGear Lite. To view image files or movies with your CLIÉ handheld, use PictureGear Pocket or gMovie.

To install PictureGear Lite on your computer, proceed as follows:

- 1 Insert the Installation CD-ROM into the CD-ROM drive.
The **Installation Launcher** window appears.
- 2 Select your language.
The **Main application type selection** screen is displayed.
- 3 Click **Install CLIÉ Utilities**.
- 4 Click **Install CLIÉ Image Software**.
- 5 Click **Install PictureGear Lite**.
The **PictureGear Lite** installation starts. Follow the onscreen instructions to finish the installation.
- 6 Click **Exit**.

 If you already have the PictureGear 5.x software installed on your computer, click **Install CLIÉ Plug-in for PictureGear 5.x** instead of **PictureGear Lite** in step 5 above.

Starting PictureGear Lite

To start PictureGear, proceed as follows:

From the **Start** Menu, click **Program Files (All Programs in Windows® XP)**, **PictureGear Lite**, and then **PictureGear Lite**.

For details on how to use PictureGear Lite, see the Help files of the application.

Viewing image files stored on your CLIE handheld

You can transfer image files taken by a digital still camera or downloaded from the Internet, etc. These items can be managed using PictureGear Lite on your computer. You can also optimise photos to display on your CLIE handheld using PictureGear Lite before transferring them to your CLIE handheld.

For details on how to save image files in the format supported by PictureGear Lite, refer to the instruction manual of the device or imaging software you are using.

Transferring image files to your CLIE handheld

Prepare the image files you want to display on your CLIE handheld, and then transfer them to your CLIE handheld.

To transfer image files to your CLIE handheld, proceed as follows:

- 1 Start PictureGear Lite.
- 2 Select the image file you want to send.
You can also select multiple slides by holding down the **<Ctrl>** or **<Shift>** keys while clicking.
- 3 From the **File** menu, select **Output services** and then **Install the image during the next HotSync operation**.
The **Install the image during the next HotSync operation** dialog box appears.

- 4 Click the arrow ▼, and then select a user name. If necessary, click **Still settings** and make size and compression settings for the image file you want to send in the **Settings for PictureGear** dialog box.
- 5 Click **OK**.
The image file you want to send and the user are registered in PictureGear Lite.
- 6 Connect your CLIE handheld to the computer with the supplied USB cable.
- 7 Tap the HotSync® icon in the **Application Launcher** screen, then tap the icon again.
The registered image file(s) are automatically sent to your CLIE handheld during the HotSync® operation.

Saving an image file to the Memory Stick™



You can also transfer image files directly to a Memory Stick™.

To save an image file to a Memory Stick™, proceed as follows:

- 1 Install the MS Export software on your computer.
- 2 Insert a Memory Stick™ into your CLIE handheld.
- 3 Connect your CLIE handheld to the computer with the supplied USB cable
- 4 In the **Application Launcher** screen of your CLIE handheld, rotate the Jog Dial™ to select **MS Import** and press the Jog Dial™.
Alternatively, tap the **MS Import** icon on the **Application Launcher** screen.
MS Import starts.
- 5 Start PictureGear Lite on your computer.
- 6 Select the image in PictureGear Lite.
- 7 From the **File** menu in the same screen, click **Output services**, then select **Output CLIE Handheld format file to Memory Stick™**.
The **Output CLIE Handheld format file to Memory Stick™** dialog box appears.
- 8 From the list next to **Save into drive**, select the Memory Stick™ drive.
- 9 Click **OK**.


Viewing image files with your CLIÉ handheld

To view image files with your CLIÉ handheld, proceed as follows:

- 1 In the Application Launcher screen, rotate the Jog Dial™ to select PG Pocket and then press the Jog Dial™.
Alternatively, tap the **PG Pocket** icon.
PictureGear Pocket starts.
- 2 Tap the arrow ▼ at the top of the screen to select **Internal**.
- 3 Rotate the Jog Dial™ to display the requested image file, and then press the Jog Dial™.
Alternatively, tap the image.
The selected image appears.
- 4 To hide icons displayed at the bottom of your CLIÉ handheld screen, tap  **hide icons**.
To display them again, tap the screen, or press the Jog Dial™ or the **Back** button.
- 5 Tap the **detailed** icon  while the image file is displayed.
Detailed information for the image file appears.
- 6 If you want to show another image file, rotate the Jog Dial™.
Another image file appears.
- 7 To return to the photo list screen, press the **Back** button.
- 8 To close the **Detailed information** screen, tap **Close** in the lower right screen or press the **Back** button.


Magnifying image files


To magnify image files, proceed as follows:

- 1 Tap  while the image file is displayed.
- 2 Rotate the Jog Dial™ to magnify the image file.
When you press the Jog Dial™, the image file is automatically magnified on the screen. If you rotate the Jog Dial™ anti-clockwise, the image is magnified. If you rotate the Jog Dial™ clockwise, the image is reduced.
- 3 If part of the image is outside the screen, you can enlarge it by dragging on the screen with your stylus.
- 4 To return to the photo list screen, press the **Back** button.

Changing the image file list screen

You can change the image file list screen to display items by name and date, or by thumbnail image.


To display the image file by name and date, tap .


To display the image file list by thumbnail image, tap .

Drawing on the image file (CLIE Paint)

With CLIE Paint, you can draw and paint on a PictureGear Pocket (PGP) format image file stored on your CLIE handheld. CLIE Paint is already installed on your CLIE handheld.

To draw and paint on a PGP format image file stored on your CLIE handheld, proceed as follows:

- 1 Display the image file on the screen.
- 2 Tap .
The **CLIE Paint** application starts.
- 3 See **Editing image files (page 32)** in this manual for details on using CLIE Paint.

 Files processed on monochrome models (e.g. PEG-SL10) are saved as a monochrome image even if the original image file is in colour.

The CLIE Paint application is compatible with the PictureGear Pocket version 2.1 (PGPF) 16-bit colour format, and is not compatible with 8-bit colour format.

Viewing image files stored on the Memory Stick™

Image files shot by a digital still camera or digital video camera recorder and recorded on a Memory Stick™ are stored in DCF format. This format differs from PGP format, which is standard for PictureGear Pocket software.

You can view both PGP format image files and DCF format image files using PictureGear Pocket. In addition, you can convert DCF format image files into PGP format image files, and save them to your CLIÉ handheld or on the Memory Stick™. DCF format images must be saved on a Memory Stick™ as they cannot be saved on your CLIÉ handheld.

To view image files stored on the Memory Stick™, proceed as follows:

- 1 In the **Application Launcher** screen, rotate the Jog Dial™ to select **PG Pocket** and then press the Jog Dial™.
Alternatively, tap the **PG Pocket** icon.
PictureGear Pocket starts.
- 2 Insert the Memory Stick™ into the Memory Stick™ slot.
- 3 Tap the arrow ▼ at the top of the screen to select **MS**.
- 4 If you want to view DCF image files taken by a digital still camera, for example, tap **DCF**.
If you want to view image files converted by PictureGear Pocket or PictureGear Lite, tap **PGP**.

 Notes on DCF format:

DCF (Design rule for Camera File system) is an industry standard format for storing image files established by JEIDA (Japan Electronic Industry Development Association).

You cannot move, copy or transfer DCF format image files using the MS Gate application. However, you can convert them into PGP format image files using PictureGear Pocket application, and save them to your CLIÉ handheld.


With the PictureGear Pocket application, you cannot view image files shot by a device that does not support the DCF format.

DCF format image files are stored in the DCIM directory of the Memory Stick™.

To display clearer pictures with PictureGear Pocket, use PictureGear Lite on your computer when converting the image files to PGP format before storing them on a Memory Stick™.

Saving image files stored on your CLIÉ handheld to a Memory Stick™ (Export)


To save image files stored on your CLIÉ handheld to a Memory Stick™, proceed as follows:

- 1 Display the image file that you want to save.
- 2 Tap the menu  icon and go to the **Image** menu, then tap **Import/Export**. The **Import/Export** dialog box appears.
- 3 Select the format you want to save the image in; Choose **PGP** (PictureGear Pocket) for further use between the Memory Stick™ and the CLIÉ handheld. Choose **DCF** if you want to mail the image to a friend, for example.
- 4 To change the category of the image files, tap the arrow ▼ and select the category.
- 5 If you want to delete the original image file stored on your CLIÉ handheld, select the **Delete the original image** check box.
- 6 If you want to print the image with a DPOF (Digital Print Order Format)-compatible printer, tap **DCF**, then select **Print setting (DPOF)**. The selected image file is saved on a Memory Stick™ in DPOF.

7 Tap OK.

The selected image file is saved to the Memory Stick™. If the selected file is in DCF format, it is automatically converted into, and saved in PGP format.

8 To cancel the operation, tap Cancel in step 6 above.

 If you save images marked in DPOF to a Memory Stick™, all DPOF settings for image files previously stored on the Memory Stick™, will be overwritten and cleared.

To save multiple image files to a Memory Stick™ at once, proceed as follows:

1 In the photo list screen, tap  Import/Export.

The check boxes used for selecting the image files appear.

2 Tap the check boxes to select the image files you want to save.**3 Tap Export.**

The **Import/Export** dialog box appears.

4 Tap OK.

Saving image files stored on a Memory Stick™ to your CLIÉ handheld (Import)

With the Import feature, DCF-format image files (for example, images taken with a digital camera) will be automatically converted into PGP format when saved on your CLIÉ handheld.

To save image files from a Memory Stick™ to your CLIÉ handheld, proceed as follows:

1 Display the image file that you want to save.

2 Tap the Menu  icon and go to the Image menu, then tap the Import/Export option.
The **Import/Export** dialog box appears.

- 3 If you want to save a PGP format image file:
To change the category of the image files, tap the arrow ▼ and select the category.
If you want to delete the original image file stored on a Memory Stick™, select the check box to delete the original image.
Select the colour option from 16-bit color (65,536 colors), or 8-bit color (256 colors). This option only appears when the selected image is in DCF format.
- 4 If you want to save a DCF format image file, tap **DCF**.
- 5 Tap **OK**.
The selected image file is converted to the PGP format and saved to your CLIÉ handheld.
Depending on the image file, this may take a few seconds.
- 6 To cancel the operation, tap **Cancel** in step 5 above.

Saving multiple image files to your CLIÉ handheld at once

You can copy both DCF and PGP format image files from a Memory Stick™ to your CLIÉ handheld with the following procedure. The DCF image files will be automatically converted into PGP format.

To save multiple image files to your CLIÉ handheld at once, proceed as follows:


- 1 In the **photo list** screen, tap  **Import/Export**.
The check boxes used for selecting the image files appear.
- 2 Tap the check boxes to select the image files you want to save.
- 3 Tap **Import**.
The **Import/Export** dialog box appears.
- 4 Tap **OK**.
The selected image files are converted to the PGP format and saved to your CLIÉ handheld. Depending on the image file, this may take a few seconds.

Beaming image files

You can beam PGP-format image files stored on your CLIÉ handheld or the inserted Memory Stick™ to another CLIÉ handheld. You cannot beam DCF format image files.

To beam image files, proceed as follows:

- 1 Display the image file that you want to beam.
- 2 Follow the steps in the **Beaming Information** section in the **Operating Instructions**.

 If **Beam Receive** in the Preferences menu is set to **Off**, you cannot receive data using the beaming feature. Before beaming data, make sure you set **Beam Receive** to **On**.

You can only beam one image file at a time.


Do not beam a 16-bit image file to a CLIÉ handheld with PictureGear Pocket Ver.1.x installed, as it is not compatible with 16-bit image files. If you do, the screen of the receiving handheld goes blank; in this case, tap the screen to recover before beaming.

Managing image files

Categorizing image files

You can manage image files using categories such as **Business** or **Personal**. You can also create personalized categories.

To categorize image files, proceed as follows:

- 1 Tap  in the image file list screen.
The check boxes used for selecting the image files appear.
- 2 Tap the check boxes to select the image file(s) you want to categorize.
- 3 Tap Categorize.
The **Category Modification** dialog box appears.
- 4 Tap the arrow ▼, and select the desired category.
- 5 Tap **OK**.

To personalize categories, proceed as follows:


- 1 Select **Edit Categories** in step 4 above.
The **Edit Categories** screen is displayed.
- 2 Tap **New**, and enter a name for the new category. You can always rename the categories by tapping **Rename** instead of tapping **New**.


To delete a category, select the category you want to delete in the **Edit Categories** screen, and tap **Delete**.

Attaching comments to image files

You can attach comments to PGP format image files stored on your CLIE handheld.



To attach comments to image files, proceed as follows:

- 1 Display the image file that you want to enter a comment about.
- 2 Tap the  **details** button.
The **Details** screen is displayed.
- 3 Enter your comment in the **Comment** field.
- 4 Tap **Close**.
If you wish to enter comments to other image files, you can tap **Prev** or **Next** here to go to other image files in the same category.

 You cannot attach comments to image files stored on a Memory Stick™.

Deleting image files

To delete image files, proceed as follows:

- 1 Tap  in the **image file list** screen. Then, tap the check boxes to select the image file(s) you want to delete.
Alternatively, you can tap  while the image file is displayed.
- 2 Tap **Delete**.
The **Deletion confirmed** dialog box appears.
- 3 If you are sure about deleting the image, tap **OK**.


Displaying image files one after another


You can display image files one after another on your CLIÉ handheld with the PhotoStand function. As an alternative to World Alarm Clock, you can use PhotoStand to display the time on your CLIÉ handheld.

PhotoStand is available on your CLIÉ handheld once you perform a HotSync® operation after installing the Palm™ Desktop software.

Making a PhotoStand Setting

To make a PhotoStand setting, proceed as follows:

- 1 In the photo list screen of PictureGear Pocket, tap  **PhotoStand**.
The check boxes used for selecting the image files appear.
- 2 Select the image files that you want to display with the PhotoStand function.
- 3 Tap **PhotoStand**.
The **PhotoStand application** starts, and the **Settings** screen appears.
- 4 Make your settings:
 - Title:** Enter the title of your Photo Stand slide show.
 - Sort By:** Select the order in which to display the image files.
 - Effect:** Select the transition effect to be used between images or the clock type.
 - Display Interval:** Set an interval to determine the length of time an individual image file will be displayed.
 - Loop:** If you want to repeat image files automatically from the start, tap to select this check box.
 - Show the icon on Home Screen:** If you do not want to show the icon of the file set for PhotoStand application on the **Application Launcher** screen, deselect this check box.

- Autorun:** If you want to start PhotoStand when you insert a Memory Stick™ into your CLIE handheld, select this check box. This option appears only if you select the images stored on the Memory Stick™ for PhotoStand.
 - 5 Tap **Save**.
The image files that you selected in step 2 and the settings you made in step 4 are saved with a PhotoStand title.
-  Not all Display Intervals are available for certain effects.
- Do not copy the PhotoStand settings from the Memory Stick™ to the CLIE handheld or vice versa. A malfunction may occur.

Starting PhotoStand

To start PhotoStand, proceed as follows:

- 1 In the **Application Launcher** screen, rotate the Jog Dial™ to select PhotoStand and then press the Jog Dial™.
Alternatively, tap the **PhotoStand** icon.
PhotoStand starts.
- 2 Tap the PhotoStand title that you want to play.
- 3 Tap **Play**.
Image files in the selected category appear one after another.
DCF format image files may take more time to be displayed than PGP format image files.
- 4 To see the PhotoStand title lists stored on the Memory Stick™, select ▼ **MS** in step 2.

Viewing sample image files

You can view sample image files installed on your computer. Install the CLIÉ Palm™ Desktop software on your hard disk using the supplied CD-ROM and then connect your CLIÉ handheld to the computer with the supplied USB cable.

To view sample image files installed on your computer, proceed as follows:

- 1 Double-click the **Palm Desktop for CLIÉ** icon on the Windows desktop.
The **Palm Desktop for CLIÉ software** starts.
- 2 Click **Install**.
The **Install Tool** dialog box appears.
- 3 Select a user name from the user list.
- 4 Click **Add**.
Make sure that the **Add-on** folder is selected. If the **Add-on** folder is not selected, select the folder manually. By default, the **Add-on** folder is stored in the **Sony Handheld** folder of the **Program Files** folder.
- 5 Double-click the **PGPocket samples** folder.
- 6 Double-click the sample image file you want to view on the screen of your CLIÉ handheld.
The selected image file name is added to the File Name list. If you want to view other sample images, repeat this step.
- 7 Click **Done**.
- 8 Tap the **HotSync** icon in the **Application Launcher** screen, then tap the icon again.
The selected sample image files are installed on your CLIÉ handheld.
- 9 Start PictureGear Pocket.

PictureGear Pocket menu items


The following items appear when you tap the **Menu**  icon.

Photo list screen

View menu

- ❑ **List:** changes the view of the photo list screen.
- ❑ **PhotoStand:** starts the PhotoStand application.

Image menu

- ❑ **Import/Export:** shows the Import/Export screen where you can select the image file(s) you want to import/export.
- ❑ **Delete:** shows the **Remove** screen for selecting the image file(s) you want to delete.
- ❑ **Categorize:** shows the **Categorize** screen for select the image file(s) you want to categorize.

Options menu

- ❑ **Preferences** (available only when you view image files stored on a Memory Stick™)
 - ❑ **Default Display Format of the Memory Stick:** To choose the default display for viewing images stored on a Memory Stick™, select PGP or DCF.
- ❑ **About PictureGear Pocket:** shows the version information of PictureGear Pocket.

Image file screen

View menu


- ❑ **Back:** returns to the Photo list screen.
- ❑ **Details:** shows detailed information for the image file.
- ❑ **Zoom:** magnifies the image file. For details, see **Magnifying image files (page 16)**.
- ❑ **First Image:** shows the first image file.
- ❑ **Previous Image:** shows the previous image file.
- ❑ **Next Image:** shows the next image file.
- ❑ **Last Image:** shows the last image file.
- ❑ **Show/Hide tool bar:** shows/hides the toolbar at the bottom of the screen.

Image menu

- ❑ **Import/Export:** imports/exports the currently selected image file.
- ❑ **Delete:** deletes the currently selected image file. For details, refer to the online manual.
- ❑ **Beam:** beams the currently selected image file to another CLIÉ handheld.
- ❑ **CLIÉ Paint:** the CLIÉ Paint application starts.

Options menu

- ❑ **Preference:** shows the **Preference** screen:
 - ❑ **Display Loop:** If you want to go through the image file list using the Jog Dial with the first image and the last image coming back-to-back, tap to select this check box.
- ❑ **About PictureGear Pocket:** shows the version information of PictureGear Pocket.

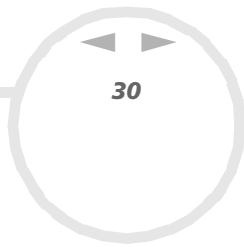

PhotoStand screen

Options menu

- **About PhotoStand:** shows version information for the PhotoStand application.

Back to main menu ▲



CLIÉ Paint

CLIÉ

Editing image files

CLÍÉ Paint is a preinstalled application that lets you edit images. It works closely with the PictureGear application, where the images are stored.

You can add letters or marks to a PictureGear Pocket image stored on your CLÍÉ handheld, or paint on a white background.

If you want to edit an image stored on a Memory Stick™, you must first import it to the CLÍÉ handheld with PictureGear Pocket, then start CLÍÉ Paint. Likewise, if you want to save your image to the Memory Stick™, you can save it first on the CLÍÉ handheld, then export it through PictureGear Pocket.

 Data is converted into a 16-bit colour image in PictureGear Pocket format (PGP) and is not compatible with 8-bit colour images.

Pictures in colour are shown in monochrome on the PEG-SL10.


Launching CLIÉ Paint

You can launch CLIÉ Paint either from the Application Launcher, or from PictureGear Pocket.

To start CLIÉ Paint from the Application Launcher, proceed as follows :

- 1 Rotate the Jog Dial™ to select the **CLIÉ Paint** icon and then press the Jog Dial™. Alternatively, tap the **CLIÉ Paint** icon.
- 2 Tap to select the screen size of your drawing.
A white drawing area (canvas) of the selected size is displayed.

To start CLIÉ Paint from PictureGear Pocket, proceed as follows:

- 1 Launch PictureGear Pocket.
- 2 Select a picture by tapping on it.
The picture is displayed in full screen mode.
- 3 Tap  on the screen.
The image is opened in CLIÉ Paint and is ready for editing.


Elements of the CLIÉ Paint screen

The screen shown below appears when you have started CLIÉ Paint and selected the picture size.

If you launch CLIÉ Paint directly, you will see a blank screen. If you launch CLIÉ Paint through PictureGear Pocket, an image file will appear, as below.

You can work in CLIÉ Paint by tapping the icons in the lower part of the screen.

Note that pictures in colour here are displayed in black and white on the PEG-SL10.

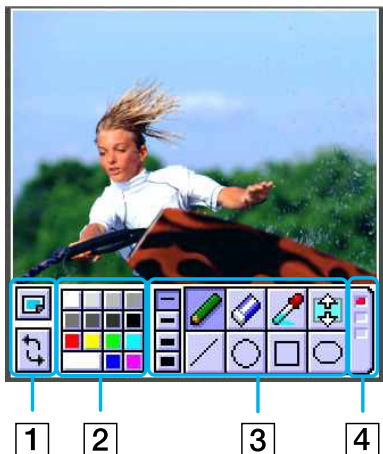









	<i>Icons:</i>	<i>Actions:</i>
1.	Menu icons	Tapping these icons switches screens.
2.	Colour palette	You can select the colour or greyscale for painting, characters, etc. by tapping the colour palette. See Colour/Shade palette (page 36) .
3.	Tool icons	Tap the icons to select a tool and draw on the screen with the stylus.
4.	Tool-switching bar	Tapping this bar switches tool icons.

Menu icons

   Click on the **Menu** icon  :

The following icons appear:

	New	Displays a new white screen
	Load	Imports and displays a PGP-formatted picture from PictureGear Pocket
	Save As	Save as a new file (original file is kept)
	Overwrite	Overwrite the file (original file is changed)
	Cancel	Returns to the edit screen
	Redo/Undo	Cancels the last operation. Or, when tapped right after Undo, recovers the operation cancelled with Redo
	Information	Displays information about the copyright and version, etc. of CLIÉ Paint

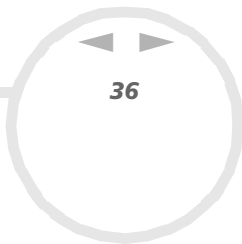

Colour/Shade palette

You can select the drawing colour or greyscale by tapping the colour palette.




PEG-SL10: Choose the shade from the displayed 16-step greyscale.


PEG-SJ30: You can choose the basic colours from the palette, or tap the larger button at the bottom left of the palette to choose more colours.

To edit the selected colour (PEG-SJ30 only) proceed as follows:

- 1 Tap the larger button at the bottom left of the palette.
The colour-picker and the RGB color level bars appear.
- 2 Select a colour or adjust the colour level and tap **OK** to change the colour.
- 3 To return to the palette without changing the colour/shade, tap **Cancel**.

Tool icons

	Pen	Draws lines and pictures in the colour you have selected.
	Eraser	Erases lines, pictures or letters on a drawing screen. You cannot erase original pictures including photographs.
	Syringe	Samples a colour/shade from the original image file to the colour palette.
	Scroll	Scrolls a screen up and down if the picture is larger than 320x320.

 Images that have been stored once cannot be erased with the eraser. However, you can erase lines and drawings you have written with the following tools: pen, line, circle, quadrilateral, corner-rounded quadrilateral, letter, stamp, spray, shading off and mosaic.

Tool-switching bar

:Tool-switching bar: tapping this bar switches the tool icons as follows:



1)





 



2)







3)

Tap it again to return to the first toolbar.


The icons are use as the following drawing tools:


	Line	Draws a straight line in the selected colour
	Circle (with/without fill)	Draws a circle
	Quadrilateral (with/without fill)	Draws a quadrilateral in the colour you have selected
	Round-cornered quadrilateral (with/without fill)	Draws a round-cornered quadrilateral
	Letter	Writes letters on a picture, using CLIÉ's screen keyboard or Graffiti®. Tapping OK on the screen puts the characters in a dotted circle. You can move the letters by dragging the dotted circle with the stylus. Tap the outside of the dotted circle to fix the letters. By tapping the Thickness tool , you can change the size of the letters in the dotted circle.
	Spray	Creates a spray effect. By tapping the Thickness tool, you can change the spray range.

	<p>Shading off</p>	<p>Shades off the part you have traced with the Pen on a picture. On the PEG-SL10, you will see the shading in grayscale.</p>
	<p>Mosaic</p>	<p>Creates a mosaic effect on the part you have selected with the Quadrilateral tool on a picture.</p>
	<p>Stamp</p>	<p>Stamps 12 different pictures. Tap to show the different stamps. When you tap to select the stamp, it is displayed with a dotted border around it. While it is selected, you can change its size by tapping one of the Stamp size icons, or drag it with the stylus and change its location on the image. Tap anywhere outside the dotted border to place it.</p>
	<p>Thickness</p>	<p>Selects one of four different sizes for the Pen, Eraser, Line, Circle, Quadrilateral, Corner-rounded quadrilateral, Letter tools and Shading off tool. When Letter is selected, you can change the font size by using this thickness tool. When Spray is selected, you can select the extent of the spray effect.</p>

Saving an edited picture


To save an edited picture, proceed as follows :

- 1 Tap  .
The **Menu** appears.
- 2 Tap **Over-write** or **Save As**.
With **Over-write**, the edited picture will be written over its original data and stored. The original data will not be kept.
With **Save As**, the edited picture will be saved as a different file. Enter a new name for the file.

 When you edit and save a colour image on the PEG-SL10, it will be saved in monochrome. Please be aware that if you choose **Over-write**, the original colours will be lost.

If you press the buttons or tap the icons to switch applications while editing a picture, a dialog box appears. Unless you respond, you may lose unsaved changes to the edited picture.

Back to main menu ▲

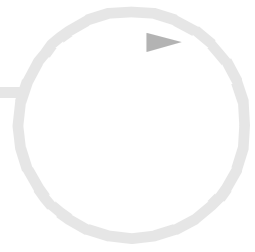

gMovie

CLiÉ

Playing movies

gMovie allows you to display or play back video data created using Windows® applications such as PictureGear Lite on your CLiÉ handheld.

gMovie is installed on your CLiÉ handheld as soon as you install the Palm Desktop for CLiÉ software on your computer and perform a HotSync® operation.

In addition, install PictureGear Lite software on your computer from the supplied installation CD-ROM. After a hard reset, gMovie must be reinstalled manually. See **Installing add-on Applications from the Palm Desktop for CLiÉ Software** in the **Read This First Guide**.


You can play a movie that has been converted to the proper format and then transferred from your computer, or stored on a Memory Stick™. This means you can enjoy your favourite movies anytime, anywhere.

You can transfer movies shot by a digital still camera or downloaded from the Internet, etc. These movies are managed by the PictureGear Lite software on your computer. You will need to optimize movies on your CLiÉ handheld with PictureGear Lite before transferring them.

Transferring movies to your CLIÉ handheld

Prepare the items you want to display on your CLIÉ handheld, and then transfer them from your computer.

To transfer movies to your CLIÉ handheld, proceed as follows:

- 1 Start PictureGear Lite.
 - 2 Select the movie you want to send.
You can also select multiple slides by holding down the <Ctrl> or <Shift> keys while clicking.
 - 3 From the **File** menu, select **Output services** and then **Install the image during the next HotSync operation**.
The **Install the image during the next HotSync operation** dialog box appears.
 - 4 Click the arrow ▼, and then select a user name.
If necessary, click **Movie settings** and make size and compression settings for the image you want to send in the **Settings for Movies on CLIÉ Handheld** dialog box.
 - 5 Click **OK**.
The slides you want to send and the user name are registered in PictureGear Lite.
 - 6 Connect your CLIÉ handheld to the computer with the supplied USB cable.
 - 7 Tap the HotSync[®] icon in the Application Launcher screen, then tap the icon again.
The registered slides are automatically sent to your CLIÉ handheld during the HotSync[®] operation.
-  If the created movie file is too large and exceeds the free memory space of the CLIÉ handheld, an error message may appear during the HotSync[®] operation. To display a large size movie file using gMovie, use a Memory Stick™.

Saving a movie to the Memory Stick™

You can also transfer movie files directly to a Memory Stick™ via the CLIÉ handheld.

To save a movie on a Memory Stick™, proceed as follows:


- 1 Install Memory Stick Export on your computer from the supplied CD-ROM.
- 2 Insert a Memory Stick™ into your CLIÉ handheld.
- 3 Connect your CLIÉ handheld to the computer with the supplied USB cable
- 4 In the **Application Launcher** screen of your CLIÉ handheld, rotate the Jog Dial™ to select **MS Import** and then press the Jog Dial™.
Alternatively, tap the **MS Import** icon on the **Application Launcher** screen.
The **MS Import** application starts.
- 5 Start PictureGear Lite on your computer.
- 6 Select the movie in PictureGear Lite.
- 7 From the **File** menu in the same screen, click **Output services**, then select **Output CLIÉ Handheld format file to Memory Stick**.
The **Output CLIÉ Handheld format file to Memory Stick** dialog box appears.
- 8 From the list next to **Save into drive**, select the Memory Stick™ drive.
- 9 Click **OK**.
The movie is saved to the Memory Stick™.

Playing movies

To play a movie, proceed as follows:

From the Application Launcher, rotate the Jog Dial™, select **gMovie** and then press the Jog Dial™. Alternatively, tap the **gMovie** icon.

gMovie starts and the movie list screen appears.

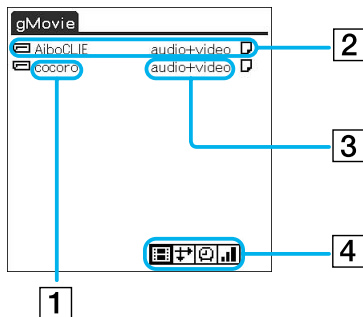

1.	Movie title
2.	Movie list, a Memory Stick™ icon is displayed for movies stored on the inserted Memory Stick™. The folder icon displays details of the movie.
3.	Information column: Audio+video indicates that this movie has recorded audio. A movie without audio is indicated as video .
4.	Display switch icons: Tap to switch the type of information displayed in the information column: movie types screen size in pixels running time* file size. *If the movie has many frames per second, the actual running time may be longer than indicated.

A welcome screen appears the first time you launch the application. Tap **OK** and the **movie list** screen appears.

<i>To:</i>	<i>Action:</i>
Start playback	Tap the movie you want to play.
Stop playback	Tap Stop .
Resume playback	Tap ▶ Play .
Locate the start point of the movie	Tap ⏮ Locate .
Return to the movie list screen	Tap ☰ Return in the top right-hand corner of the screen.
Play the next movie	Tap ▶ Next in the top right-hand corner of the screen. Alternatively, press and rotate the Jog Dial™ downward during movie playback.
Play the previous movie	Press and rotate the Jog Dial™ upward during movie playback, or tap in the upper-right corner of the display ◀ previous .
Play movies one after another (continuous playback)	Tap and hold ▶ Next in the top right-hand corner of the screen for a few seconds. The icon changes into ▶▶ Continuous , the next movie starts and movies stored on your CLIE handheld are played one after another. To return to normal playback, tap ▶▶ Continuous for a few seconds.
Delete a movie	<ol style="list-style-type: none"> 1. Display the movie you want to delete, and then tap Menu. 2. Tap Delete. 3. Tap OK. The selected movie is deleted, and the movie list screen appears.

Playing sample movie files

You can view sample movie files installed on your computer. Install the CLiÉ Palm Desktop software on your hard disk from the supplied CD-ROM and then connect your CLiÉ handheld to the computer with the supplied USB cable.

To play sample movie files installed on your computer, proceed as follows:


- 1 Double-click the **Palm Desktop for CLiÉ** icon on the **Windows** desktop.
The **Palm Desktop for CLiÉ** software starts.
- 2 Click **Install**.
The **Install Tool** dialog box appears.
- 3 Select a user name from the user list.
- 4 Click **Add**.
Make sure that the **Add-on** folder is selected. If the **Add-on** folder is not selected, select the folder manually. By default, the **Add-on** folder is stored in the **Sony Handheld** folder under **Program Files**.
- 5 Double-click the **gMovie** folder, then the **samples** folder.
- 6 Double-click the sample movie file you want to play on the screen of your CLiÉ handheld.
The selected movie file name is added to the **File Name** list. If you want to play another sample movie, repeat the previous step.
- 7 Click **Done**.
- 8 Connect your CLiÉ handheld to the computer with the supplied USB cable.
- 9 Tap the HotSync[®] icon in the Application Launcher screen, then tap the icon again.
The selected sample movie file is installed on your CLiÉ handheld.
- 10 Start gMovie.

Creating a movie file for gMovie using PictureGear Lite

You can create a movie file for gMovie with PictureGear Lite, which you can install PictureGear Lite to your computer from the installation CD-ROM supplied with your CLIÉ handheld.

PictureGear Lite supports the following movie file formats:

- MPEG1 (file extension: .MPG, .MPEG)
- AVI (file extension: .AVI)
- QuickTime 3.0, QuickTime 4.0 and QuickTime 5.0 (file extension: .MOV, .QT)

 When using gMovie on your CLIÉ handheld, you may not be able to display some AVI format files that do not conform to the Video for Windows® standard.

About the "Detailed settings for CLIÉ handheld movies" dialog box

- Select Compression Method:** selects the greyscale or colour level for the movie file(s) you want to send. Click to select:
 - Monochrome** (High compression);
 - Monochrome** (High image quality);
 - Color** (Normal frame rate; or
 - Color** (High frame rate).
- Size:** selects the dimension size of the movie file(s) you want to send. Click to select **160 x 120**, **120 x 92**, or **80 x 60**.
- Dithering:** if **Monochrome** (High compression) is selected in **Select Compression Method**, you can use this slider to adjust the dither level by dragging it to the left or right. You cannot use this function on **Monochrome (High image quality)** or **Color** movies.


 If you select **still image movie** files, the **Settings for Still images** dialog box appears.


gMovie software menu items

Media list screen

Media menu - About gMovie: shows the version information of the gMovie application.

Movie file screen

- ❑ **Media menu:** when you tap **Menu**  in the movie list screen, the following items appear:
 - ❑ **Details:** shows detailed information on the media currently in use.
 - ❑ **Beam Media:** transfers the data contained in the current media to another CLIÉ handheld via the IrDA port. For details about beaming, see the **Operating Instructions** manual.
 - ❑ **Delete:** deletes the media currently in use. Tap **OK** in the **Delete Media** dialog box to delete. Tap **Cancel** to cancel deletion.
 - ❑ **Preferences:**
 - Loop movie playback:** stops playback when the movie file being played stops. When you deselect the check box, the movie being played does not restart automatically.
 - ❑ **About gMovie:** shows the version information of the gMovie application.

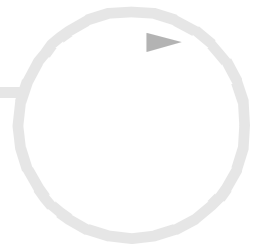

Memory Stick Gate

CLiÉ

Exchanging data with the Memory Stick™

The Memory Stick™ allows you to exchange data between your CLIÉ handheld and your computer or a digital camera that supports Memory Stick™. To exchange data with the Memory Stick™, your CLIÉ uses the preinstalled Memory Stick™ Gate software (hereafter referred to as MS Gate).






Memory Stick™ files can be found in the Palm™ Desktop software under the directory: **PALMPROGRAMS\MSFILES**. You can also copy, move or delete data stored in other directories on your Memory Stick™.


Starting MS Gate

To start MS Gate, proceed as follows:

In the **Application Launcher**, rotate the Jog Dial™, select **MS Gate**, then press the Jog Dial™. Alternatively, tap the **MS Gate** icon.

MS Gate starts and data lists appear on the screen.

<i>Icon</i>	<i>Definition</i>
 Internal	Tap this icon to view the data on the CLIÉ handheld
▼ Size	Type: kind of file Size: size of file Creator: creator ID of file Version: version of file
 (lock)	Indicates the files that you cannot copy or delete
 (info)	Tap this icon to view the Memory Stick™ content information
	Tap this icon to display the upper folder, if applicable
	Tap this icon to display the contents of the folder
▼ (name)	Tap here to display file name to show the file name with PC file extensions


-  If the Handheld Full dialog box appears during start-up, no data is shown. To make space, delete unnecessary data or applications from your CLIÉ handheld.

Notes on copying and deleting MS Gate data

If you move or delete a part of the data file, the applications on the CLIÉ handheld may stop operating or the data might be cleared. When you delete part of the data file, the operation of the applications and the data contents on the CLIÉ handheld are not guaranteed.

Do not move or delete the following data files from the CLIÉ handheld:

- Saved Preference:** The latest operating circumstances and settings of various applications are saved.
- Unsaved Preference:** The settings of various applications and user information of the CLIÉ handheld are saved. If you delete this file, the next HotSync® operation may not work correctly.
- NetworkDB:** Networking settings. If you delete this file, you will not be able to access the Internet.
- AddressDB:** Address Database files.
- DatebookDB:** Datebook Database files.
- MemoDB:** Memo Database files.
- ExpenseDB:** Expense Database files.
- MailDB:** Mail Database files.
- ToDoDB:** ToDo Database files.



-  These database files can be copied and backed up on a Memory Stick™. Note however, that if the backup data is moved back to the CLIÉ handheld, the data stored on the CLIÉ handheld is replaced by the backup data, and any data added or revised on the CLIÉ handheld since the data backup, will be erased.

The default folder on the Memory Stick™

When MS Gate first recognises the insertion of a Memory Stick™, it automatically creates a default folder on the Memory Stick™, named **PALM/PROGRAMS/ MSFILES**. The default folder is the standard working folder where MS Gate reads and writes data.

Changing the destination folder

To change the destination folder on the Memory Stick™, proceed as follows:



- 1 Tap the arrow ▼ in the upper right corner to select MS from the drop-down list.
The contents of Memory Stick™ are listed.
- 2 Tap  or  to select the destination folder.
The folder display changes and you can specify the destination folder.

You can only select a folder under the **PALM/PROGRAMS** or **PALM/ Launcher** folder. The other folders cannot be selected as destination.

Copying data from your CLIÉ handheld to the Memory Stick™


You can copy data from your CLIÉ handheld to a Memory Stick™ using MS Gate.

To copy data from the CLIÉ handheld to a Memory Stick™, proceed as follows:

- 1 Insert a Memory Stick™ into the CLIÉ handheld.
- 2 Tap the **Home** icon .
The **Application Launcher** appears.
- 3 Rotate the Jog Dial™ and select MS Gate, then press the Jog Dial™.
Alternatively, tap the MS Gate icon .
MS Gate starts, and a list of the data stored on the CLIÉ handheld, is displayed.

1.	Select all	Selects all the files between the first and last file you select. It copies all data as one batch.
2.	Clear all	Cancels the selection of selected data.
3.	Copy	Copies the selected files.
4.	Move	Moves the selected files. Choose this option to save memory space on the handheld.
5.	Delete	Deletes the selected files. The data on the CLIÉ handheld is deleted after it is saved on the Memory Stick™.

- 4 Select the data you want to copy to the Memory Stick™.
- 5 Tap **Copy**.
The data you have selected is copied to the Memory Stick™.

 A Memory Stick™ cannot be used while the remaining battery power is low, because duplicating data consumes battery power, therefore, either connect the AC adapter (PEG-SJ30) or replace the batteries (PEG-SL10).

You can tap and select multiple files.



You cannot copy data marked with the lock symbol .

If there is not much free memory space on the CLIÉ handheld, we recommend that you move the data, instead of copying it to the Memory Stick™.

Copying data from the Memory Stick™ to your CLIÉ handheld

You can use MS Gate to copy data saved on a Memory Stick™ to your CLIÉ handheld.



To copy data from a Memory Stick™ to the CLIÉ handheld, proceed as follows:


 
- 1 Insert the Memory Stick™ into your CLIÉ handheld.
 - 2 Tap the **Home** icon.
The **Application Launcher** appears.
 - 3 Rotate the Jog Dial™ and select **MS Gate**, then press the Jog Dial™.
Alternatively, tap the MS Gate icon .
MS Gate starts and a list of the data stored on the CLIÉ handheld is displayed.
 - 4 Press the Jog Dial™ and select **MS**.
Alternatively, select **MS** from the drop-down list ▼ in the top right-hand corner.
A list of the data stored on the Memory Stick™ is displayed.
 - 5 Select the data you want to copy to the CLIÉ handheld.
Use **Select All** to copy all the data at once.
 - 6 Tap **Copy**.
The **Copy File** dialog box is displayed.
 - 7 Tap **OK**.
The data you selected from the Memory Stick™ is copied to the CLIÉ handheld.
-  Make sure your CLIÉ handheld has enough memory space before copying.
To cancel all the selections, tap **Clear All**. To clear the selection of individual selected items only, tap them one at a time.

Deleting data from the Memory Stick™

You can delete unnecessary data saved on the Memory Stick™ by using MS Gate.

To delete data on a Memory Stick™, proceed as follows:

- 1 Insert the Memory Stick™ into your CLIÉ handheld.
- 2 Tap the **Home** icon .
- 3 Turn the Jog Dial™ and select **MS Gate**, then press the Jog Dial™.
Alternatively, tap the MS Gate icon .
MS Gate starts and a list of data stored on the CLIÉ handheld, is displayed.
- 4 Press the Jog Dial™.
A list of the data stored on the Memory Stick™ is displayed.
- 5 Select the data you want to delete.
- 6 Tap **Delete**.
The data you selected is deleted from the Memory Stick™.

To change the folder to be deleted, tap  or  to select the folder that you want to delete. The folder display changes and you can specify a folder to be deleted.

You can only select a folder under the **PALM/PROGRAMS** or **PALM/Launcher** folder. The other folders cannot be selected.

 You cannot delete a read-only file.


Installing applications to/from the Memory Stick™ without MS Gate


You can copy and install applications to/from a Memory Stick™ from/to your CLIÉ handheld from the **Application Launcher** screen.

However, observe the following points, as a may occur depending on the application.

- ❑ You can only copy application files (files with extensions such as .prc, .pdb) with the following procedure. Related files will not be copied together at the same time.
- ❑ Data stored on the Memory Stick™ (such as image files) will not be displayed.
- ❑ You can only install applications on the PALM/Launcher directory of the Memory Stick™.

To copy application files to/from your Memory Stick™, proceed as follows:


- 1 Insert the Memory Stick™ into the Memory Stick™ slot of your CLIÉ handheld. The contents of Memory Stick™ are displayed.
- 2 Tap the **Menu**  icon on your CLIÉ handheld.
- 3 Tap **Copy** from the drop-down list. The **Copy** dialog box appears.
- 4 Tap the arrow ▼ next to **Copy to**, and select either **Handheld** or **Card**.
- 5 Tap the arrow ▼ next to **From**, and select either **Card** or **Handheld**.
- 6 Tap the application you want to install.
- 7 Tap **Copy**.
The selected application is installed onto your CLIÉ handheld.

 You do not necessarily have to install an application to the CLIE handheld in order to use it. If you want to save the CLIE handheld's memory space, you can simply tap to select the application in step 1. (Note that such applications can only be used while the Memory Stick™ containing the application is inserted in the CLIE handheld).

When installing applications without MS Gate, you can only start application files (files with extensions such as .prc, .pdb). Image files and movie files that come with the application, cannot be started.

If you cannot start the installed file data, move the file data to the CLIE handheld using MS Gate, or delete the files. If you do not use MS Gate when installing, applications and data files are stored in the **PALM/Launcher** folder.

MS Gate commands

MS Gate uses unique menu commands for exchanging data between your CLIE handheld and a Memory Stick™. The following items appear when you tap the **Menu**  icon in MS Gate.


Tools menus

The content of the **Tools** menu depends on the displayed screen.

- ❑ **Select all:** Selects all data displayed in the tab you select.
- ❑ **Clear all:** Cancels the selected data.
- ❑ **Move:** Moves selected data to the CLIE handheld or Memory Stick™. The **Move files** screen appears. Tap **OK** to move the selected data.
- ❑ **Copy:** Copies selected data to the CLIE handheld or Memory Stick™. The **Copy files** screen appears. Tap **OK** to copy the selected data.
- ❑ **Delete:** Deletes selected data from the CLIE handheld or Memory Stick™. The **Delete files** screen appears. Tap **OK** to delete the selected data.
- ❑ **Rename:** Changes the file or folder names on the Memory Stick™.
- ❑ **Create Folder:** Adds a new folder to the current folder (selected folder) on the Memory Stick™.
- ❑ **Create Default Folder:** Creates a **PALM\PROGRAMS\MSFILES** folder.
- ❑ **Change to Default Folder:** Returns to the **PALM\PROGRAMS\MSFILES** working folder.

Option menus

- ❑ **Format:** Formats the Memory Stick™ inserted in your CLIE handheld.
- ❑ **Media Information:** Displays the memory information of the Memory Stick™.
- ❑ **About MS Gate:** Shows the version information for MS Gate.

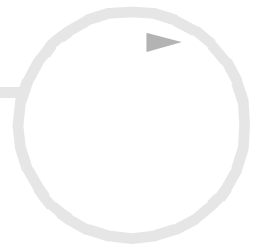

Memory Stick Autorun

CLiÉ

Setting the Memory Stick™ automatic start function

This section explains how to set the Memory Stick™ automatic start function on your CLIÉ handheld. Memory Stick Autorun is preinstalled on your CLIÉ handheld, you do not have to install it yourself.

What you can do with Memory Stick Autorun

Memory Stick™ Autorun (hereafter referred to as MS Autorun) is an application which allows your CLIÉ handheld to copy and start a specified application automatically when a Memory Stick™ is inserted into the CLIÉ handheld. Removing the Memory Stick™, automatically deletes the application copy from the memory of the CLIÉ handheld.

❑ **Starting an application (.prc) on the CLIÉ handheld automatically:**

When using a Memory Stick™-compatible digital still camera, for example, you can view your images by inserting the Memory Stick™ into the CLIÉ handheld.

❑ **Starting an application (.prc) on a Memory Stick™ automatically:**

This setting is for automatically starting an application that does not access any data, such as a game or an application, which accesses data on the CLIÉ handheld and not on the Memory Stick™.

❑ **Starting a preselected application (.prc) and related database files (.pdb, .prc) on a Memory Stick™:**

This setting automatically displays a specified image or file with an application such as an image viewer or a document reader.

❑ **Starting an application (.prc) on the CLIÉ handheld automatically with specific database files (.pdb, .prc) on a Memory Stick™:**

This setting is used if the application is located on the CLIÉ handheld and the corresponding database files are located on a Memory Stick™. You can also display the data automatically by inserting the Memory Stick™ into your CLIÉ handheld.

- ★ If you specify PictureGear Pocket as an autorun application, tap the arrow ▼ at the top of the screen in PictureGear Pocket to select **MS**. Likewise, if you specify gMovie player as an autorun application, tap the movie file you want to play.

It is not recommended that you use MS Autorun with the Address Book, Date Book, To Do List, Memo Pad Calculator or Mail applications. Problems may occur if the data of these applications does not remain on your CLiÉ handheld when you perform a HotSync® operation.

The specified application may not start automatically depending on the application in use when you insert the Memory Stick™ into your CLiÉ handheld. In this case, return to the **Application Launcher** screen and reinsert the Memory Stick™.


Setting MS Autorun for applications on the CLiÉ handheld

To set MS Autorun for an application, proceed as follows:

- 1 Install the application you want to start automatically onto the CLiÉ handheld.
- 2 Insert the Memory Stick™ into the Memory Stick™ slot.
- 3 In the **Application Launcher**, rotate the Jog Dial™ to select **MSAutorun** and then press the Jog Dial™. Alternatively, tap the **MSAutorun** icon. MS Autorun starts.
- 4 Press the Jog Dial™. The list of applications on your CLiÉ handheld appears.
- 5 Tap the application for which you want to set the autorun function.
- 6 Tap **Set**. The setting is stored on the Memory Stick™, and the confirmation dialog box appears.
- 7 Tap **OK**. The autorun setting is completed and you can remove the Memory Stick™.

Starting MS Autorun for applications on the Memory Stick™

To automatically start an application on the Memory Stick™, proceed as follows:


- 1 Install the application onto the Memory Stick™.
 - 2 Insert the Memory Stick™ into your CLIE handheld.
 - 3 In the **Application Launcher**, rotate the Jog Dial™ to select **MSAutorun** and then press the Jog Dial™. Alternatively, tap the **MSAutorun** icon. MS Autorun starts.
 - 4 Press the Jog Dial™. The list of applications on the Memory Stick™ appears.
 - 5 Tap the application for which you want to set the autorun function.
 - 6 Tap **Set**. The setting is stored on the Memory Stick™, and the confirmation dialog box appears.
 - 7 Tap **OK**. The autorun setting is completed and you can remove the Memory Stick™.
-  Make sure you are in the **PALM\LAUNCHER** folder.

Starting applications or associated data files on the Memory Stick™

This example describes the settings for gMovie for movie viewer and its data files. First make sure you have set up gMovie as an autorun application, see **Setting MS Autorun for applications on the CLIÉ handheld (page 64)**.

To start the application automatically and open the corresponding data file on the Memory Stick™, proceed as follows:

- 1 Insert the Memory Stick™ into the Memory Stick™ slot.
- 2 From the CLIÉ handheld **Application Launcher** screen, start **MS Gate**.
- 3 From the list displayed, tap **gMovie** and then **movie data** file.
- 4 Tap **Move**.
The specified application and database files, which will be deleted from the CLIÉ handheld, are copied onto the Memory Stick™.
Make sure you are in the folder **PALMLAUNCHER**.
- 5 Return to the **Home** screen to start **MS Autorun**.
The list of applications stored on the Memory Stick™ appears.
- 6 From the list displayed, tap **gMovie**.
- 7 Tap the down arrow next to **Select launch app** and then tap **Select install DBs**.
The list of applications and data files appear.
- 8 From the list displayed, tap the **gMovie movie** file.
To select multiple data files, tap each item.
- 9 Tap **Set**.
The setting is stored on the Memory Stick™, and the **Autorun setting** display appears.
- 10 Tap **OK**.
The autorun setting is made for gMovie. The specified database file is displayed.
You can remove the Memory Stick™.

 Removing the Memory Stick™ does not update the database files on the Memory Stick™. Be careful when the application needs to be updated.

Specifying the data file on the Memory Stick™ to start applications automatically

This section describes the setting for gMovie and its sample data files.

To specify the data files on the Memory Stick™, proceed as follows:

- 1 Install gMovie on the CLIÉ handheld.
- 2 Insert the Memory Stick™ into the Memory Stick™ slot.
- 3 From the **Application Launcher** screen, start MS Gate.
- 4 Tap **gMovie** from the list displayed.
- 5 Tap **Move**.
The specified data files, which will be deleted from the CLIÉ handheld memory, are copied on the Memory Stick™.
Make sure you are in the folder **PALMLAUNCHER**.
- 6 Return to the **Home** screen to start **MS Autorun**.
The list of applications on the Memory Stick™ appears.
- 7 Tap **gMovie**.
- 8 Tap the **Select launch app** drop-down list and then tap **Select install DBs**.
The list of applications and database files appear.
- 9 Tap the gMovie movie data file.
Tap each item to select multiple database files.
- 10 Tap **Set**.
The settings are stored on the Memory Stick™, and the **Autorun setting** display appears.

- 11 Tap **OK**.

The settings to start the example on the CLIÉ handheld automatically display the specified database files. Afterwards, return to the **Application Launcher** screen to remove the Memory Stick™.

Starting an autorun application

To perform an autorun function, proceed as follows:


- 1 Insert the Memory Stick™ into the Memory Stick™ slot.
The **Now Loading** dialog box appears, and the specified application and database files will be copied to the CLIÉ handheld.
When the copying process is complete, the application will automatically start.
Do not remove the Memory Stick™ when the **Now Loading** dialog box is displayed.
- 2 Use the launched application.
- 3 When you have finished using the application, remove the Memory Stick™.
The application closes, and you return to the **Application Launcher** screen.
The application and database files are automatically deleted from the memory of the CLIÉ handheld.

 Data on the Memory Stick™ is not updated after the Memory Stick™ has been removed.


Viewing the MS autorun history log

When you insert or remove a Memory Stick™ to perform the autorun function, a history log is created on the CLIÉ handheld (MSAutorun_log). If autorun fails, you can check the history log for information.

To check the history log for information, proceed as follows:

- 1 From the **Application Launcher** screen, start **MS Autorun**.
- 2 Tap the **Menu**  icon.
- 3 Tap **Display log**.
The history log is displayed in the **Autorun log** dialog box.

- 4 When you have finished checking the history log, tap **Close**.

 The stored log is cleared each time a Memory Stick™ is inserted.

Changing settings


To change the settings you have made, proceed as follows:

- 1 From the **Application Launcher** screen, start MS Autorun.
- 2 Insert the Memory Stick™ for which you want to change the autorun setting.
- 3 Tap the arrow ▼ next to **Select launch app**, and tap **Select install DBs**.
- 4 Tap the files you want to select or deselect.
- 5 Tap **Set**, and then **OK**.

Cancelling the autorun function temporarily

If you need to rearrange data stored on several Memory Sticks™, you may not want applications to start automatically. In this case, you can temporarily cancel the autorun feature.

To temporarily cancel the autorun feature, proceed as follows:


- 1 From the **Application Launcher** screen, start **MS Autorun**.
- 2 Tap the **Menu**  icon.
- 3 Tap **Preferences**.
The **Preferences** dialog box appears.
- 4 Select the **Disable** check box in Autorun.
- 5 Tap **OK**.
The autorun function is temporarily cancelled.

★ To enable the autorun function, perform steps 1-3 listed above, then deselect the **Disable** check box.

Deleting the autorun setting


When you delete the autorun setting, you cancel the autorun function on the Memory Stick™.

To delete the autorun setting, proceed as follows:


- 1 From the **Application Launcher** screen, start **MS Autorun**.
- 2 Insert the Memory Stick™ into the Memory Stick™ slot.
- 3 Tap the **Menu**  icon.
- 4 Tap **Tools**.
The **Tools** dialog box appears.
- 5 Tap **Delete autorun setting**.
The **Delete setting** dialog box appears.
- 6 Tap **OK**.
The autorun setting is deleted.
- 7 Tap **Close**.

 The autorun setting of MS Autorun is stored in the file named **PALM\DEFAULT.ARN** on the Memory Stick™. You can delete autorun settings by deleting this file with your computer.

MS Autorun menu items


The following **Options** menu is displayed by tapping the **Menu**  icon when MS Autorun is running:

- ❑ **Display log:** when a Memory Stick™ is inserted or removed from your CLIÉ handheld, a history log is created. From the **Options** menu, you can view this information by tapping **Display log**.
- ❑ **Tools:** the following buttons appear in the **Tools** dialog box:
 - ❑ **Recover:** this button is displayed when the autorun function is performed and MS Autorun is started without removing the Memory Stick™. You can delete the application and database files copied on your CLIÉ handheld.
 - ❑ **Delete autorun setting:** this button is displayed when the autorun setting file is stored on the inserted Memory Stick™. You can delete the autorun setting on the Memory Stick™.
- ❑ **Preferences:** displays the **Preferences** dialog box. The following items appear in this dialog box:
 - ❑ **Autorun:** you can temporarily cancel the auto-run function.
 - ❑ **MS List:** you can switch the format of the data list on the Memory Stick™.
- ❑ **About MS Autorun:** the version information of the MS Autorun application is displayed.

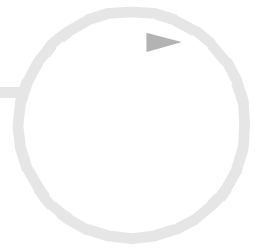

Memory Stick Backup

CLiÉ

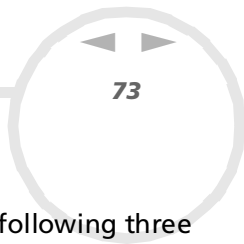

Backing up data

You can save a backup copy of the data on your CLIE handheld by performing one of the following three methods:


- ❑ Back up data to your computer through a HotSync® operation.
- ❑ Back up all data to a Memory Stick™ using the Memory Stick Backup application (hereafter referred to as MS Backup).
- ❑ Back up data to a Memory Stick™ using the Memory Stick Gate application (hereafter referred to as MS Gate).

Backing up data with a HotSync® operation

By default, you can back up the following data on your computer with a HotSync® operation:

- Memo Pad data files
- Address Book data files
- To Do List data files
- Date Book data files
- Preferences data files
- Network Setup information
- Applications files that have been installed using a HotSync® operation
- User information files when you perform a HotSync® operation.

During the next HotSync® operation, the backup data is compared with the data on your computer, and the more recent one becomes effective. If you perform a hard reset, all records and entries stored on your CLIE handheld are erased and reset to the initial status. If you save a backup of your CLIE handheld data, you can restore any data previously synchronized with your computer during the next HotSync® operation.

 Some applications are not designed to be backed up. Therefore, you may not be able to restore some applications and data. It is recommended that you reinstall these applications.

If you change settings in the **Change HotSync Action** dialog box, you may not be able to save a backup. You cannot back up an application or restore its data if you select an option other than to synchronize the files.

Backing up data to a Memory Stick™


With MS Backup, you can back up all the following CLIÉ handheld applications and data to a Memory Stick™ with a single tap. To separately back up applications and data to the Memory Stick™, use MS Gate.

- ❑ Memo Pad data files
- ❑ Address Book data files
- ❑ To Do List data files
- ❑ Date Book data files
- ❑ Preferences data files
- ❑ Network Setup information
- ❑ Applications files that have been installed using a HotSync® operation
- ❑ User information files when you perform a HotSync® operation.

Backing up data with MS Backup

When you back up your CLIÉ data on a Memory Stick™, the data size of the backup may become larger than the total data size displayed in MS Gate. This is not a malfunction. Make sure you have more space free on the Memory Stick™ than the displayed CLIÉ data size before making a back up.

To use the MS Backup application, proceed as follows:


- 1 Insert a Memory Stick™ into the Memory Stick™ slot.
- 2 Tap the **Home** icon .
- 3 Rotate the Jog Dial™ to select **MS Backup** and then press the Jog Dial™. Alternatively, tap the **MS Backup** icon. MS Backup starts and the backup list appears.

- 4 Tap  (**MS Backup**).

The **Backup All Files** dialog box appears.

- 5 Tap **OK**.

The **Backup Progress** screen appears, and the backup's general information (its date, size, and number of contents) appears in the list.

-  Do not make any changes to the directory tree on the Memory Stick™ after making a backup. If you do, you will not be able to restore the backup data to your CLIÉ handheld.

In most cases, the backup will be finished within approximately a minute.

In step 4, you can also select an existing file from the back-up list, and then tap **Backup** to overwrite it.

To delete backup files from the Memory Stick™, tap to select the backup in the **Backup** list, and tap **Delete**. The selected file is deleted from the Memory Stick™.



Restoring backup files to your CLIÉ handheld

When you restore backup data and applications to your CLIÉ handheld, the data currently saved on your CLIÉ handheld will be overwritten.

Any data created or edited after you saved the backup will be erased.

You can only restore data to the CLIÉ handheld from which you made a backup.

To restore your backed up files, proceed as follows:


- 1 Insert the Memory Stick™ with the backup files into the Memory Stick™ slot.
- 2 Tap the **Home** icon .
- 3 Rotate the Jog Dial™ to select **MS Backup** and then press the Jog Dial™. Alternatively, tap the **MS Backup**  icon in the **Application Launcher** screen. MS Backup starts and the backup list appears.
- 4 In the **MS Backup** screen, tap to select the back up data that you want to restore from the list.

- 5 Tap **Restore**.
The **Restore Confirm** dialog box appears.
- 6 Tap **OK**.
When the backup data is restored, the CLIÉ handheld automatically shuts itself down and restarts.

Backing up data with MS Gate

MS Gate allows you to save a backup of the following applications and data of your CLIÉ handheld to the Memory Stick™ (the file name after the colon is the name displayed in MS Gate).

- Applications:
 - Plugin files: CmPL...
 - gMovie: gMovie
 - Network setup data: inetSetup
- Data:
 - Address Book data files: AddressDB
 - Date Book data files: DatebookDB
 - Memo Pad data files: MemoDB
 - To Do List data files: ToDoDB
 - Network setup information: NetworkDB
 - Sound files: System MIDI Sounds (SMF format)/System ADPCM Sounds (PCM format)
 - Other application setting data files: SavedPreferences
 - User information and other preferences data files: UnsavedPreferences

 Applications may not function properly if the necessary files are not backed up.
Do not select Graffiti® ShortCuts, Net Prefs, and sonyres files, as they cannot be copied.
You cannot copy data marked with a lock icon.

Restoring data from an MS Gate backup

When you restore backup data and applications to your CLIÉ handheld, the data currently saved on your CLIÉ handheld will be overwritten with the backup data. Any data created or edited after you saved the backup will be erased.


Insert a Memory Stick™ storing the back-up data into your CLIÉ handheld and use MS Gate to copy the data to your CLIÉ handheld.

 If an overwrite confirm message is displayed, tap **Yes to all**.

If a delete or access error message is displayed while copying files, tap **OK** to proceed to the next step in copying. Those files, however, will not be copied.

Depending on the application configurations or file protection status, some necessary files may not be copied. In this case, an application may not function properly.

Some applications are not designed to be backed up. Therefore, you may not be able to restore some applications and data. It is recommended that you reinstall those applications.

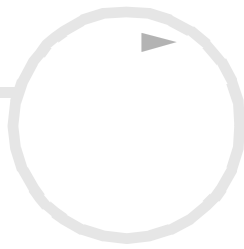

Memory Stick Import / Export

clié

Copying data to the Memory Stick™

This section explains how to copy the data from your computer to the Memory Stick™ of your CLIÉ handheld directly without performing a HotSync® operation.

What you can do with the MS Import / Export applications

Both Memory Stick Import and Memory Stick Export (hereafter referred to as MS Import and MS Export) are applications designed to help you copy the data from your computer to the Memory Stick™ on your CLIÉ handheld directly without performing a HotSync® operation.

- ❑ When copying the data from your computer:
You have to use both the MS Import application on your CLIÉ handheld and the MS Export software on your computer at the same time.
- ❑ Before using MS Import ▲ Export:
You have to install the MS Export software on your computer. MS Import is already installed on your CLIÉ handheld.
- ❑ Installing CLIÉ applications without performing a HotSync® operation:
With MS Import / Export, you can install application files (.prc or .pdb) on your CLIÉ handheld without performing a HotSync® operation.
- ❑ Using your CLIÉ handheld as a removable disk:
With MS Import / Export, you can use your CLIÉ handheld as if it was a removable disk from the Windows desktop of your computer. You can not only read the data stored on the Memory Stick™ on your CLIÉ handheld from your computer, but also write data on the Memory Stick™ from your computer.

Installing MS Import / Export

You need to install the MS Export software on your computer (the MS Import application is already installed on your CLIÉ handheld). This application is installed on your computer when you install the Palm Desktop for CLIÉ software. If you uninstalled it, follow the procedure here below to reinstall it.


To install the MS Export software on your computer, proceed as follows:

- 1 Insert the installation CD-ROM into the CD-ROM drive of your computer.
The setup program starts automatically.
- 2 Select the language.
- 3 Click **Install CLIÉ Utilities**.
- 4 Click **Install Memory Stick Export**.
The installation starts. Follow the instructions displayed on the screen. When the installation is complete, the installation screen reappears.
- 5 Click **Exit**.
MS Export is installed.

Installing CLIÉ applications using MS Import / Export

You can install applications for your CLIÉ handheld on the Memory Stick™ without performing a HotSync® operation, if you use MS Import / Export.

To install applications on the Memory Stick™, proceed as follows:

- 1 Insert a Memory Stick™ into your CLIÉ handheld.
- 2 Place your CLIÉ handheld in the cradle.
- 3 In the **Application Launcher** screen, rotate the Jog Dial™ to select MS Import and then press the Jog Dial™.
Alternatively, tap the **MS Import** icon.
MS Import starts.
- 4 Drag and drop add-on application files (.prc or .pdb) for your CLIÉ handheld to the **MS Export** shortcut icon on your Windows® desktop. These files are automatically copied to the appropriate folders.
If the application file type could not be recognized by the MS Export, the **Registration** dialog box appears.
In this case, enter the application name and destination folder to which the application will be copied.
- 5 When you have finished, tap **Disconnect** or tap **Home** .

 Do not remove the Memory Stick™ while connecting to your computer.



If your computer's operating system is Windows® 2000 Professional, Windows® XP or Windows® Millennium Edition, a warning message appears when you tap **Disconnect** on your CLIÉ handheld. Click **OK**, and then continue the operations.

To confirm the contents of the Memory Stick™ after copying the application, start **MS Export** again, then click the **Memory Stick™ Drive** tab of the MS Export software.

You cannot copy applications by dragging them to the Memory Stick™ Drive window of the MS Export software.

Using your CLIÉ handheld as a removable disk

To use your CLIÉ handheld as a removable disk, proceed as follows:

- 1 Connect the cradle to a computer in which you have installed MS Export.
 - 2 Insert the Memory Stick™ into your CLIÉ handheld.
 - 3 Place your CLIÉ handheld in the cradle.
 - 4 In the **Application Launcher** screen, rotate the Jog Dial™ to select **MS Import** and then press the Jog Dial™.
Alternatively, tap the **MS Import** icon.
MS Import starts.
 - 5 Operate the file or data using Windows Explorer, for example.
Not only can you copy or delete data stored on the Memory Stick™, you can also write data from your computer to the Memory Stick™.
When you copy the application to the **PALM/Launcher** folder of the Memory Stick™, some applications on your CLIÉ handheld may not display the file list of the Memory Stick™ appropriately.
 - 6 When you finish the operation, tap **Disconnect** or tap **Home** .
Do not remove the Memory Stick™ while connected to your computer.
-  If your computer's operating system is Windows® 2000 Professional, Windows® Millennium Edition, Windows® XP, a warning message appears when you tap **Disconnect** on your Sony CLIÉ handheld. Click **OK**, and then continue.

MS Import menu items

The following item appears when you tap the **Menu**  icon.

Options menu

About MS Import: Shows the version information of the MS Import application.

Back to main menu ▲



World Alarm Clock

CLiÉ

Viewing the time around the world

World Alarm Clock provides you with an additional clock, showing you the local time and/or the time around the world. It also works as an alarm clock. World Alarm Clock is preinstalled on your CLIE handheld.


As a clock showing local time: you can view the present local time on your World Alarm Clock application, and also set the clock to show Daylight Saving Time.

- ❑ As a clock showing the time around the world: in addition to your local time, World Alarm Clock can show the time of up to three other areas of your choice around the world in a single time line, and the date of each area. The world clock time line enables you to see whether you are ahead or behind of a certain area in time and date, and can therefore help you in communicating with your business partners worldwide.
- ❑ As an alarm clock: you can set several alarms on your World Alarm Clock (by sound or by LED reminder (PEG-SJ30 only) for a certain time or day of the week. The tone for the alarm can be selected from preinstalled sound files.


To see the World Alarm Clock time, proceed as follows:

In the **Application Launcher** screen, rotate the Jog Dial™ to select WA Clock and then press the Jog Dial™. Alternatively, tap the WA Clock icon in the **Application Launcher** screen. The World Alarm Clock application starts and the clock screen is displayed.

Elements of the clock screen

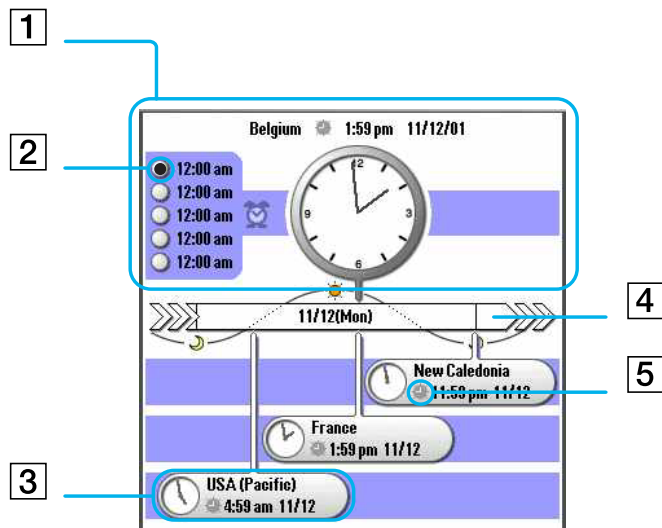

- | | |
|----|---|
| 1. | The clock with the time and date of your present time zone (as set for your CLIÉ handheld). |
| 2. | Set alarm icon: If an alarm is set, the icon will be marked black. |
| 3. | The clock for different time zones (to select the time zones you want to view here, see Selecting other time zones (page 87)). |
| 4. | Time line with the date. |
| 5. | Daylight Saving Time icon: Tap to change the indicated time to daylight saving time (the shade of the icon changes). Tap again to remove. |

 The World Alarm Clock application displays the time according to the time setting for the CLIÉ handheld. Make sure you set the correct date and time in the CLIÉ handheld's **Preferences** screen. For details, refer to the **Operating Instructions** manual.

Viewing the world time

Selecting other time zones

You can select up to three areas to be displayed other than your present location. The time and date for these other areas will be displayed on the lower half of the clock screen.

To set the time area, proceed as follows:

- 1 On the clock screen, tap the area name (the default setting is **USA (Pacific)**) for the smaller clock on the lower half of the screen.
The **Set Time Zone** screen appears.
- 2 Tap to select the time zone, and tap **OK**.

Previewing the future time and date

You can preview the time and date ahead of the present time by using the Jog Dial™.








To preview the time and date ahead, proceed as follows:


 

- 1 Rotate the Jog Dial™ to preview the future time for all time zones.
The clock goes forward in units of 15 minutes.
- 2 To return to the present time view, wait ten seconds or press the **Back** button.

Setting the alarm

You can set up to five alarms. To set an alarm for a different day, use the Date Book. See **Setting the alarm** in the **Operating Instructions** manual for details.


To set the alarm, proceed as follows:

- 1 On the clock screen, tap the **Set Alarm**  icon next to the **Alarm**  icon.
The **Set Alarm** screen appears. If you already have an alarm set for the selected number, the **Set Alarm** screen will show the latest settings for that number.
- 2 Tap the arrow  next to **Off**, and select **On**.
- 3 On the **Comment** line, enter a note that you would like to add to the alarm.
- 4 Tap the **Time** box.
The **Set Time** screen appears.
- 5 Set the time.
 - Tap the **hour** box and tap the arrow  or  to set the hour.
 - Tap the **minute** box and tap the arrow  or  to set the minute.
 - If you selected this format for the time in the preferences, tap to select **AM** or **PM**.
- 6 Tap **OK**.
The display returns to the **Set Alarm** screen.
- 7 Tap the numbered/lettered box to set a single or repeat alarm.
 - 1**: Sets a single alarm.
 - E**: Sets a daily alarm.
 - S, M, T, W, T, F, S**: Sets a weekly repeated alarm. You can select more than one day of the week.
- 8 Set the alarm type.
 - Tap the check boxes to select the type of alarm from **Sound**, **Crescendo** or **LED** (PEG-SJ30 only)
A combination of alarms will work as well.

- ❑ If you selected **Sound**: Select the tone of the alarm by tapping the arrow ▼ beneath the **Sound** check box.
 - ❑ If you selected **Sound**: Select the way you want the alarm to ring:
 - ❑ **Crescendo**: Tap the check box to select this if you want the alarm to increase its volume while it rings.
 - ❑ **Duration**: Tap the arrow ▼ next to this item to select the length of time the alarm will go on. The choices are **5, 10, 15, 30** or **45** seconds.
- 9 Select the repeating options.
- ❑ **Remind Me**: Select how many times the alarm repeats itself.
 - ❑ **Play Every**: Select how often the alarm repeats itself. The choices of interval are **1, 3, 5, 10, 15, 20,** or **30** minutes.
- 10 Tap **OK**.
The display returns to the **clock** screen.
The **Set Alarm**  icon for the active alarms will be marked black (.
-  The alarm will work even if your CLIE handheld is switched off.
If the alarm volume is low, **Crescendo** may not function.
Make sure you set the time length in **Duration** so that it is more than twice the length of the sound file, or else **Crescendo** may not function.

Changing the alarm setting



To change the alarm setting, proceed as follows:

- 1 In the **clock** screen, tap the **Set Alarm**  icon of the setting you want to change. The **Set Alarm** screen for that alarm appears.
 - 2 Make the changes in the **Set Alarm** screen.
 - 3 Tap **OK**.
- ★ To clear the setting, tap **Default** in the **Set Alarm** screen. The setting for that alarm number returns to the default setting.

Canceling a set alarm

You can deactivate an alarm without deleting its setting.

To cancel an alarm, proceed as follows:

- 1 On the **clock** screen, tap the **Set Alarm**  icon of the alarm you wish to cancel. The **Set Alarm** screen for that alarm appears.
- 2 Tap the arrow  next to **On**, and select **Off** from the drop-down list. The alarm is deactivated but the setting remains. Deactivated alarms are not marked.


 If you select **Off** for **Alarm Sound** and **LED Alarm** in the **General Preferences** screen, the **Sound/LED** (PEG-SJ30 only) of the alarm will be deactivated even if you have selected **Alarm On** here.

Stopping the alarm

When the alarm goes off, a dialog box appears.


- To stop the alarm and close the screen, tap **OK**.
 - To stop the alarm and snooze for a few minutes, tap **Snooze**.
- ★ If you do not turn off the alarm, the alarm goes off again according to what you set for **Remind Me** in step 9 of the **Setting the clock alarm** section.
- ★ If you tap **Snooze**, an alarm goes off approximately every 5 minutes until you stop the alarm.

World Alarm Clock menu items

The following items appear when you tap the **Menu**  icon in World Alarm Clock.

Options menu

- ❑ **Day Color:** Set a different colour for each day of the week.
- ❑ **About World Alarm Clock:** Shows the version information of World Alarm Clock.

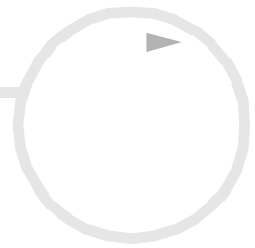


Documents To Go®

CLiÉ

Viewing Word, Excel and other files on your CLIÉ handheld

Documents To Go® lets you transfer documents to your CLIÉ handheld so you can view and edit them anytime, anywhere. Install Documents to Go® onto your computer's hard drive from the supplied installation CD-ROM. Files transferred from Documents to Go® to your CLIÉ handheld are stored on the handheld under the Documents application.

To transfer files from your computer to your CLIÉ handheld, proceed as follows:

- 1 Open Documents To Go® on your computer by double-clicking the icon on the desktop.
- 2 Click the **Add Item** button and browse to select the file you want to add. Alternatively, you can drag and drop your Word, Excel and other files into the **Documents To Go** window.
- 3 Select the file(s) in the list that you want to transfer.
- 4 Connect your CLIÉ handheld to the computer with the supplied USB cable.
- 5 Tap the **HotSync** icon  to transfer the files to your CLIÉ handheld. The files are transferred to your CLIÉ handheld.

To open your files on your CLIÉ handheld, proceed as follows:

- 1 In the **Application Launcher** screen, rotate the Jog Dial™ to select the **Documents** icon and then press the Jog Dial™. Alternatively, tap the **Documents** icon. The **Documents To Go** screen appears.
- 2 Tap the name of the document you want to use from the list of synchronized files. The relevant application (for example, WordToGo for Microsoft Word files) is launched automatically and displays the document.
- 3 Edit your files using Graffiti® or otherwise.

 For more details, see the Documents To Go® Help files.